

DragonFire Racing

2330 W. Broadway Rd #112

Mesa, AZ 85202

1 (800) 708-9803

WWW.DRAGONFIRERACING.COM



FEEL THE HEAT!

RacePace Head Ache Bars Installation Instructions

Congratulations on your purchase of the DragonFire Head Ache Bars! As part of our Race Pace modular cage system these Head Ache Bars are a great addition to any RZR giving not only added support, but also providing a stylish and aggressive look. Be sure to check out the full line of Race Pace products from DragonFire!

WARNING

- *Do not use if there is any sign of damage to product
- *Replacement may be needed in the event of a roll over
- *Do not use product to hang on during riding
- *Frequently inspect hardware to ensure everything is secure
- * This product will not prevent you or occupants from injury, use with extreme caution

Disclaimer


Off road activities can be hazardous and could lead to injury, dismemberment, paralysis and death. No warranty of representation is made as to the products ability to protect the user from any injury or death. The user assumes that risk. The acceptance and /or use of this merchandise purchased from DragonFire by the customer hereby shall release DragonFire from any and all liability pertaining to the use of such merchandise.

Tools Required
5/16 Allen Wrench
5/32 Allen Wrench
Grinder (optional)

Step 1: Remove all parts from packaging, make sure that everything is accounted for and not damaged. (If there is any sign of damage contact your authorized DragonFire dealer prior to install)

Step 2: Using 5/16 Allen wrench remove two center bolt and nuts assemblies from middle portion of stock roll cage on the driver's side. Place bolts aside they will be re-used later.

Step 3: Disassemble both cage clamps on driver side Head Ache Bar. Do this by removing all six bolts from both cage clamps using a 5/32 Allen wrench.

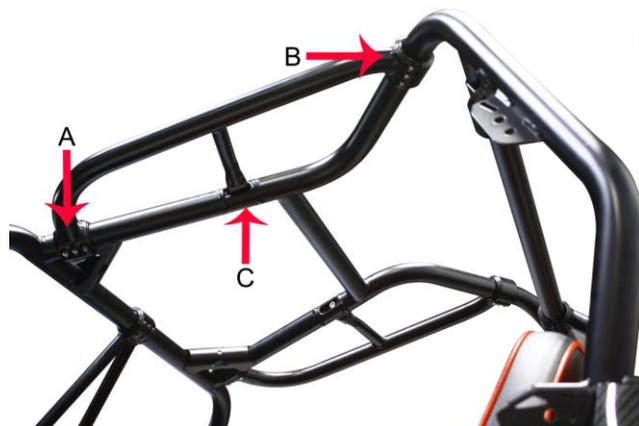

Dragonfire Racing

Step 4: Hold disassembled bar up to cage (note: only the correct side will fit) loosely install cage clamps (A&B). Loosely install center bar mount (C) using two bolts retained in (Step 2).

Step 5: Gradually tighten each mounting bolt until snug. Checks to see that each mount is sitting flush, and then hand tighten each mounting bolt. **(7 foot pounds)**

Step 6: Repeat steps 1-5 for passenger side of UTV.

PRO Tip

Be sure to regularly check all mounting bolts to ensure a snug fit.

For further assistance please contact your authorized DragonFire dealer.

