

# DragonFire Racing

2330 W. Broadway Rd #112

Mesa, AZ 85202

1 (800) 708-9803

[WWW.DRAGONFIRERACING.COM](http://WWW.DRAGONFIRERACING.COM)



**FEEL THE HEAT!**

## DragonSkins Number Plate Installation Instructions

Congratulations on your purchase of the DragonFire DragonSkins number plate system. The days of duct taping numbers to the side of your car are over; with this new kit from DragonFire you will have everything you need to add professional style numbers to any race car. Along with the website [www.Dragonfirecustomshop.com](http://www.Dragonfirecustomshop.com) you can create your own customized pre-printed backgrounds.

***\*These instructions are for the Polaris line. If you are installing this kit on a different make please call DragonFire Tech line 800-708-9803***



- \*This product is not intended to secure cargo
- \*Improper install can lead to damage of bed rail
- \*May not comply with certain racing series rules

### Disclaimer

Off road activities can be hazardous and could lead to injury, dismemberment, paralysis and death. No warranty of representation is made as to the products ability to protect the user from any injury or death. The user assumes that risk. The acceptance and /or use of this merchandise purchased from DragonFire by the customer hereby shall release DragonFire from any and all liability pertaining to the use of such merchandise.

Tools Required
1/8 Allen Wrench
3/8 Socket & Ratchet
3/16 Drill Bit & Drill

**Step 1:** Place UTV on a flat surface. Be sure to set gear shifter to park and depress parking brake if your vehicle has one. Remove keys from ignition.

**Step 2:** Locate the bed rail grommets, there will be two used per number plate. (Reference figure 1 )



**Figure 1**




**Step 3:** Lay the bed rail mount across the bed rail in the desired location. Insert the longer Allen head bolts in through the top side of the bed rail mount and down through the large holes in the bed rail. (Reference figure 2 )



**Step 4:** Reach under the rear fender and insert the supplied bed rail grommets with the smaller diameter recessing into the stock bed rail hole from the bottom side. With the supplied allen head bolts now running through all components secure with supplied nut, using socket and allen wrench. Repeat this step for both of the supplied bolts running through the bed rail mount. (Reference figure 3 & 4 )



**Step 5:** Now test fit the number plate into the mount. Once you have the desired location of the plate mark the holes that you will be using to mount the plate to the bed rail mount. Remove the plate and drill both of the holes that will be used with a 3/16" drill bit. (Reference figure 5 )

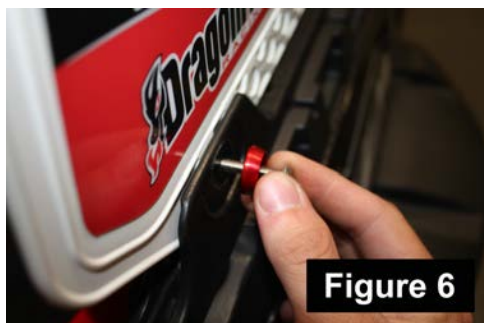

**Step 6:** Now insert plate back into bed rail mount. Align the holes you drilled with the holes on the bed rail mount. Secure this with the supplied shorter allen head bolts. Be sure to use one of the red



washers on each side of the plate, secure from the back side with supplied nut.  
**(Reference figure 6 )**

**Step 7:** Repeat steps (1-6) for the opposite side.

***For further assistance contact your authorized DragonFire dealer***



Dragonfire Racing