

DragonFire Racing

2330 W. Broadway Rd #112

Mesa, AZ 85202

1 (800) 708-9803

WWW.DRAGONFIRERACING.COM



FEEL THE HEAT!

RacePace Rear “Smash” Bumper

Congratulations on your purchase of the DragonFire RacePace Rear “Smash” Bumper for the 2008 - Current RZR Line. Please read through these instructions before installing this product. If you have any questions or concerns please contact your authorized DragonFire dealer.



***This product does not promise rear end protection in the event of a collision**

***Improper installation may result in damage to vehicle**

***This product is not intended as an anchor point for pulling**

***Do not use if there is any sign of damage**

Tools Required

T27 Torques Bit

15mm Socket or
Wrench


3/8” Ratchet

Disclaimer

Off road activities can be hazardous and could lead to injury, dismemberment, paralysis and death. No warranty of representation is made as to the products ability to protect the user from any injury or death. The user assumes that risk. The acceptance and /or use of this merchandise purchased from DragonFire by the customer hereby shall release DragonFire from any and all liability pertaining to the use of such merchandise.


Step 1: Make sure vehicle is on flat and level surface and gear selector is in park. Remove keys from ignition.

Step 2: Jack vehicle up using floor jack and secure with jack stands so that rear tires are just barely touching ground. (See Figure 1)

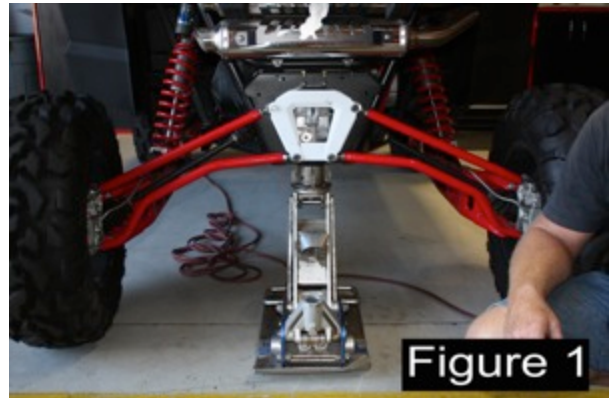

Dragonfire Racing

Step 3: Remove 4 stock bolts that retain suspension link rods and gusset plate using 15mm wrench and socket, set aside the bolts will be re-used. (See Figure 2)

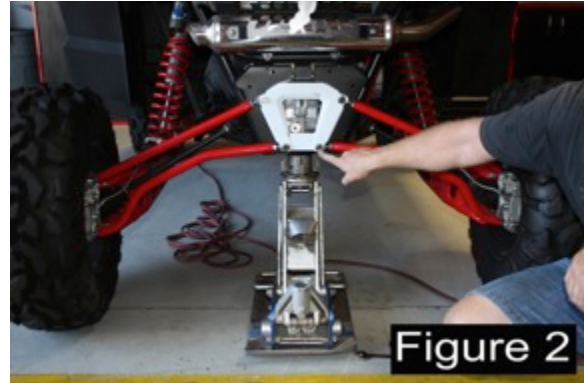

Step 4: Remove 2 stock T27 Torques screws from the rear clip, set aside they will be re-used. (See Figure 3)



Step 5: Hold rear bumper up into position and retain with 2 stock T27 torques screws retained from Step 4. (See Figure 4)



Step 6: Re-Install suspension links behind lower bumper plate using the 4 stock bolts retained in Step 3. (See Figure 5)



Step 7: Ensure all bolts and torques screw are tightened securely.

Step 8: Install bumper end caps by pressing in by hand. (See Figure 6)



- ***For further assistance please contact your authorized DragonFire Dealer***
 - ***Frequently check hardware to ensure it is securely fastened.***

