

DragonFire Racing

2330 W. Broadway Rd #112

Mesa, AZ 85202

1 (800) 708-9803

WWW.DRAGONFIRERACING.COM



FEEL THE HEAT!

DragonFire RockSolid Safri Rack Installation Instructions

Congratulations on your purchase of the DragonFire RockSolid Safari Rack! This rack has been designed to get you anywhere and bring everything with ease.

Special features like quick disconnect for easy removal and modular design make this the best rack system on the market.

Disclaimer

Off road activities can be hazardous and could lead to injury, dismemberment, paralysis and death. No warranty of representation is made as to the products ability to protect the user from any injury or death. The user assumes that risk. The acceptance and /or use of this merchandise purchased from DragonFire by the customer hereby shall release DragonFire from any and all liability pertaining to the use of such merchandise.



- Do not overload rack as vehicle may become unstable
- Use caution while cornering
- Never stand or allow passengers on top of rack
- Do **NOT** use rack if there is any sign of damage, fatigue, or malfunction
- Vehicle may not be operated by anyone under the age of 16 or under the influence of drugs / alcohol

Tools Required
7/16" Wrench
5/32" Allen Wrench
3/16" Allen Wrench

Step 1: With vehicle on flat and level ground, place gear selector in "Park". Make sure vehicle is turned off and keys are not in the ignition.

Step 2: Assemble rack by inserting front portion into bottom portion and secure with spring clip push buttons. (See figure A)




Dragonfire Racing

Step 3: Lay rack face down and install supplied center deck bolt. (See figure B)



Step 4: Remove tube clamps from L-Bracket by pulling pins, set aside they will be re-used (Note how tube clamp is attached to L-Bracket). Install L-Brackets to bottom side of cage with the bent portion facing the front of the rack. Be sure to overhang L-Bracket 1/8" over deck plate prior to snugging up hardware. (See figure C)

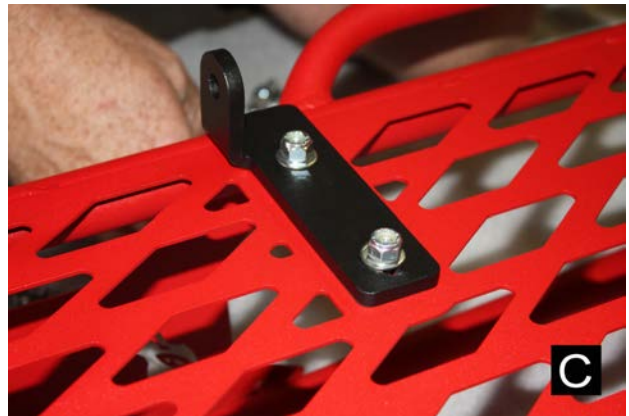

Step 5: Disassemble tube clamps by removing all Allen head hardware. Re-attach top piece of clamp to the L-Bracket using pull pins.


Step 6: With assistance place rack on top of roll cage. Place tube clamps around roll cage tubes while lowering rack onto the UTV. (Note rack was designed to match bend in factory roll cage) (See figure D)



Step 7: Align rack with front tube of roll cage. Attach other half of tube clamp around the roll cage tubes by installing 3 bolts across the bottom and one bolt in the top. Note two of the tube clamp bolts will not be installed until rack has been properly aligned. (See figure E & F)



Step 8: When you feel you have reached proper alignment front to back and side to side, pull pins from clamps and remove rack from top of the roll cage. Go through and securely fasten cage clamps by installing remaining hardware. (See figure G & H)

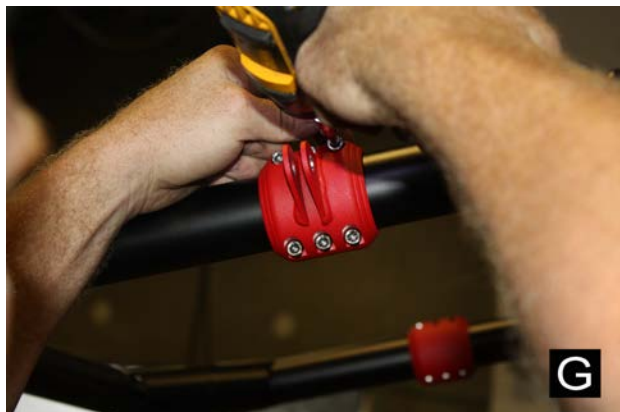

Step 9: Once all hardware is in place and secured re-install rack and secure with pull pins.

*** For further assistance please contact your authorized DragonFire dealer**

