

DragonFire Racing

2330 W. Broadway Rd #112

Mesa, AZ 85202

1 (800) 708-9803

WWW.DRAGONFIRERACING.COM



FEEL THE HEAT!

RockSolid Rear Bumper Installation Instructions

Congratulations on your purchase of the new RZR RockSolid rear bumper. Built to mimic the looks of the tough off road truck accessories this bumper brings a whole new meaning to style. The modular design is great for shipping and a high, tight profile make this one of the coolest bumpers on the market.

Disclaimer

Off road activities can be hazardous and could lead to injury, dismemberment, paralysis and death. No warranty of representation is made as to the products ability to protect the user from any injury or death. The user assumes that risk. The acceptance and /or use of this merchandise purchased from DragonFire by the customer hereby shall release DragonFire from any and all liability pertaining to the use of such merchandise.

Tools Required
(2) 9/16" Wrench
T27 Torx bit



- Do not use if there is any sign of damage or fatigue
- This bumper is not designed to protect against rear end collision
- Do not use this bumper to push or pull other vehicles
- Will increase overall vehicle length


Step 1: Place vehicle on flat and level surface. Place gear selector in “park” and remove keys from the ignition.

Step 2: Bolt the three pieces of rear bumper together using supplied hardware.
(See figure A)



Dragonfire Racing

Step 3: Remove four factory top bolts from rear plastics. Retain this hardware it will be re-used. (See figure B)

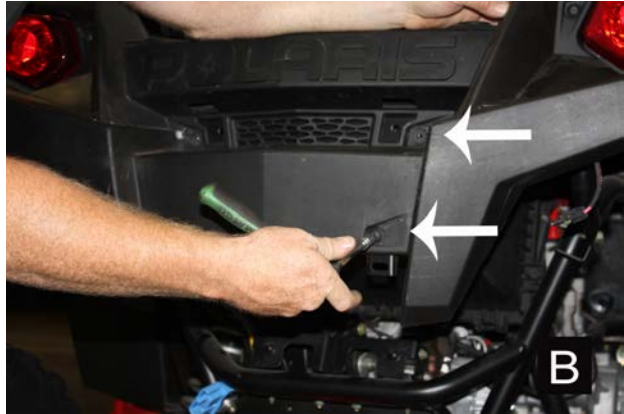

Step 4: Hold complete assembly up to the car and secure using hardware retained in step 3. It is best to start at the top and finish at the bottom. (See figure C)



*Pro Tip: Be sure to check hardware regularly and re-tighten if needed

For further assistance please contact your authorized DragonFire dealer

